

| Type | Max. capacity | Applicable model |
|-----------------|---------------|------------------|
| FX2NC-EEPROM-16 | 16k steps | FX2NC |

<Caution>

- When replacing/installing memory board, turn off the main unit power source.
When replacing/installing memory board, care must be taken not to touch the exposed EEPROM chip.
For replacement and installation of memory board refer to the procedure in the PLC main unit manual.
- EEPROM is not initialized. When used for the first time, the CPU error LED may flicker.
Transfer or write program directly, or write all NOP in on-line program mode using the FX-20P or FX-30P.
- For transportation always use an isolation bag.
- After program transfer or write, be sure to verify and check, If an error is found, transfer and verify again.

- When writing a program, turn OFF the memory protect switch, but keep it in the ON position during ordinary operation.

Attention

• This product is designed for use in industrial applications.

Note

• Manufactured by: Mitsubishi Electric Corporation
2-7-3 Marunouchi, Chiyoda-ku, Tokyo,
100-8310 Japan

• Authorized Representative in the European Community:

Mitsubishi Electric Europe B.V.
Gothaer Str. 8, 40880 Ratingen, Germany

Industrial automation
Elincom Group

European Union: w

Russia: www.elinc
