


## Memory Cassette FX1N-EEPROM-8L

The FX1N-EEPROM-8L memory cassette can be used as program memory for the FX1S/1N Series PLC and can upload/download programs from the PLC.

### 1. Cautions on Handling

- Make sure to turn the PLC power off before attaching or detaching the 8L or switching the write-protect switch.
- When the 8L is used for the first time, the CPU LED in the PLC may flicker to indicate a program error. Perform "All Clear" or transfer a program using the FX-10P, the FX-20P or the personal computer software.
- The 8L cannot be used together with the display module FX1N-5DM.
- The 8L cannot be used in conjunction with any expansion board.

### 2. Outside Dimensions

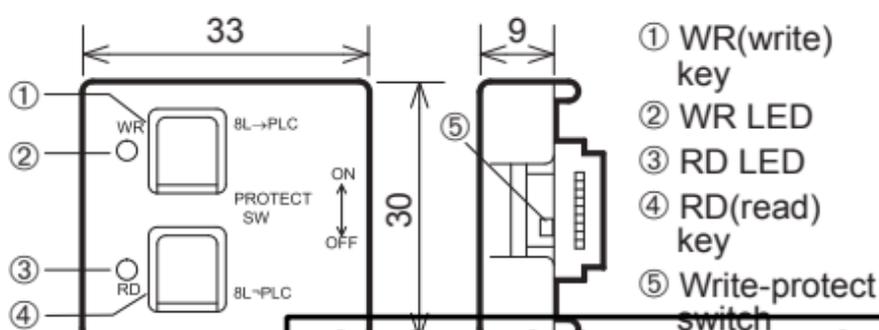


### 3. Memory Cassette Function

When the data is transferred from peripheral equipment to the PLC, it is actually transferred to the 8L which is connected to the PLC.

- 1) Attach the 8L to the PLC while the PLC power is off.
- 2) Turn on the power of the PLC. The 8L will begin operation of the program stored in it.



February 2015  
JY992D85001E

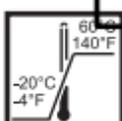

原产地 日本国  
合格证

MITSUBISHI ELECTRIC CORPORATION  
Made in Japan

### 4. Loader Function (Program Transfer Procedure)

A program can be read/written between the 8L and the PLC 2k steps (FX1S Series) or 8k steps (FX1N Series).

#### Write to the PLC

- 1) Attach the 8L to the PLC while the PLC power is off.
- 2) Turn on the power of the PLC. Press the WR key of the 8L once. The WR LED lights and the 8L is ready for write.
- 3) Press the WR key once more. The WR LED flickers and the 8L starts to write.
- 4) When the program is finished loading the LED is extinguished. (Turn off the power of the PLC, and remove the 8L.)

#### Read from the PLC

- 1) Turn off the write-protect switch provided on the right side of the 8L.
- 2) Attach the 8L to the PLC while the PLC power is off.
- 3) Turn on the power of the PLC. Press the RD key of the 8L once. The RD LED lights and the 8L is ready for the read operation.
- 4) Press the RD key once more. The RD LED flickers, and the 8L starts to read.
- 5) When the read is finished, the RD LED is extinguished. (Turn off the power of the PLC and remove the 8L. Turn the write protect switch on.)

#### Attention

- This product is designed for use in industrial applications.

#### Note

- Manufactured by: Mitsubishi Electric Corporation  
2-7-3 Marunouchi, Chiyoda-ku, Tokyo,  
100-8310 Japan
- Authorized Representative in the European Community:  
Mitsubishi Electric Europe B.V.  
Gothaer Str. 8, 40880 Ratingen, Germany